

DataLogic Magellan 900i Configuration

To configure your DataLogic scanner for Serial/RS232, scan the three codes below in order:

1. **Start/End** – you will hear one beep
2. **RS-232 Standard** – you will hear three beeps
3. **Start/End** – you will hear one beep, then a pause, then one more beep.



Your scanner is now ready to use!

 <p>START / END You will hear 1 Beep</p>	
	 <p>RS-232 Standard You will hear 3 beeps</p>
 <p>START / END You will hear 1 beep, then a pause, then 1 more beep</p>	